



Lattoflex 200

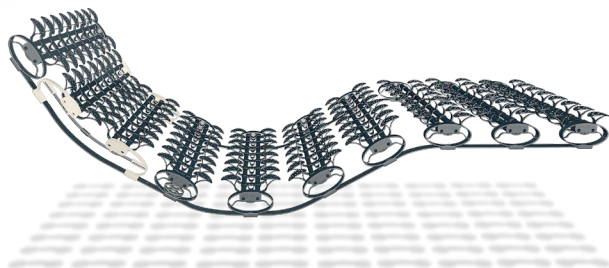

Lattoflex 900

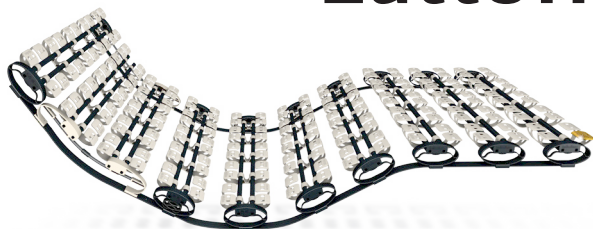

Installation and operating instructions

Functionality of the wing suspensions 200 and 900

Operating instructions base frame Lattoflex 200/900 and 210/910

Important document. Please keep in a safe place.

Here you can find more information, details and videos about your product. Digital operating instructions:



www.lattoflex.com/service/200

www.lattoflex.com/service/900

lattoflex[®]


Installation instructions

The Lattoflex 200 and Lattoflex 900 wing spring system is supplied ready mounted in the Lattoflex base frame. Operating instructions for the base frames for type 200 and 210 as well as the type 900 and 910 are contained in this leaflet. Please heed the additional instructions for all sitting frames from type 260 to 295 resp. 960 to 995.


1 Orientation

- ↓ Orientation: Shoulder zone always at the head end.
- * Only for width 120 cm to 140 cm, 4th to 7th slat with radius zone adjustment RZV.

Lattoflex 200

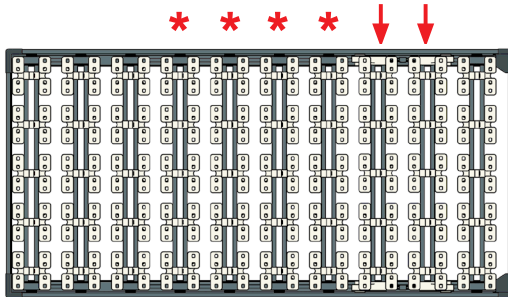

Lattoflex 900

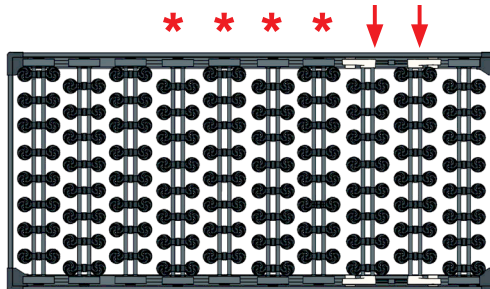

2 Placing in a bed

The 4 self-adhesive foil sheets prevent noises that may be caused by the spring base slipping sideways. Remove the backing paper from the adhesive layer. Then stick the foil sheets on the left and right sides to the head and foot of the bedstead so that the spring base rests on the foil sheets.

Operating instructions

Automatic adjustment

As a rule, the spring base is equipped with 10 double slats. The interaction of the three components: fibreglass reinforced support profile, wings and side spring elements allows the patented Lattoflex construction to adapt to a high degree to your very personal support requirements. In other words, your Lattoflex spring base adapts automatically to changing situations.

Shoulder zone

Similarly, the large shoulder zone adapts automatically. Thanks to the self-supporting design, it permits maximum spring deflection when the need arises, thus relieving the shoulder, particularly when lying on your side.

Individual adjustment

Even so, it makes sense to adapt and adjust certain things. For example, individual adjustment of certain zones in your spring base to support and relieve a hollow back.


3 Spring blocks

Use the spring blocks (FB) to adjust your bed system to your individual needs. In addition, the spring travel limiters (FWB) can be inserted for fine tuning. Simply insert them and test the system: whatever feels pleasant to you is good and correct.

1 set with 2 FB and 4 FWB are included in the scope of supply of the wing spring system. Other spring blocks are available as accessories.

Installation instructions:

The spring elements are fitted with the small spring block FB1. Please push this out in advance inwards and then plug in the spring block FB (see +). Insert the spring travel limiter (FWB) as needed (see ++ and +++).

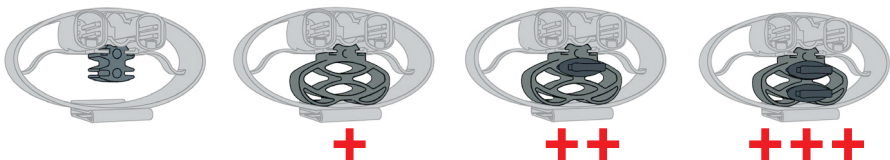

4 Lattoflex 210 & Lattoflex 910 Raised head

1. Adjust to the required stage.
2. To lower, lift to the top stopper and then lower again.



Please heed the separate installation and operating instructions for the sitting frames from type 260 to 295 and 960 to 995.

For your safety

If you remove and destroy any individual parts by force, plastic pieces may splinter off and cause injuries.